


### INSTRUÇÕES DE MONTAGEM (PT) INSTRUCTIONS DE MONTAGE (FR) ASSEMBLY INSTRUCTIONS (EN)

FERRAMENTAS NECESSÁRIAS / OUTILS NÉCESSAIRES / NECESSARY TOOLS




- 1 DESEMBALAR MÓVEIS (PT)  
DÉBALLAGE DES MEUBLES (FR)  
UNPACKING FURNITURE (EN)
  - 2 VERIFICAR SE TEM TODOS OS ACESSÓRIOS (PT)  
VÉRIFIEZ SI VOUS AVEZ TOUS LES ACCESSOIRES (FR)  
CHECK IF YOU HAVE ALL THE ACCESSORIES (EN)
  - 3 APARAFUSAR PERNAS AO CORPO DO MÓVEL (PT)  
VISSEZ LES PIEDS SUR LE CORPS DU MEUBLE (FR)  
SCREW THE LEGS TO THE FURNITURE BODY (EN)
  - 4 APARAFUSAR E AFINAR DOBRADIÇAS NA PORTA (PT)  
VISSEZ ET RÉGLER LES CHARNIÈRES DE LA PORTE (FR)  
SCREW AND ADJUST HINGES ON THE DOOR (EN)
- 
- 5 COLOCAR GAVETAS (PT)  
AJOUTER DES TIROIRS (FR)  
ADD DRAWERS (EN)

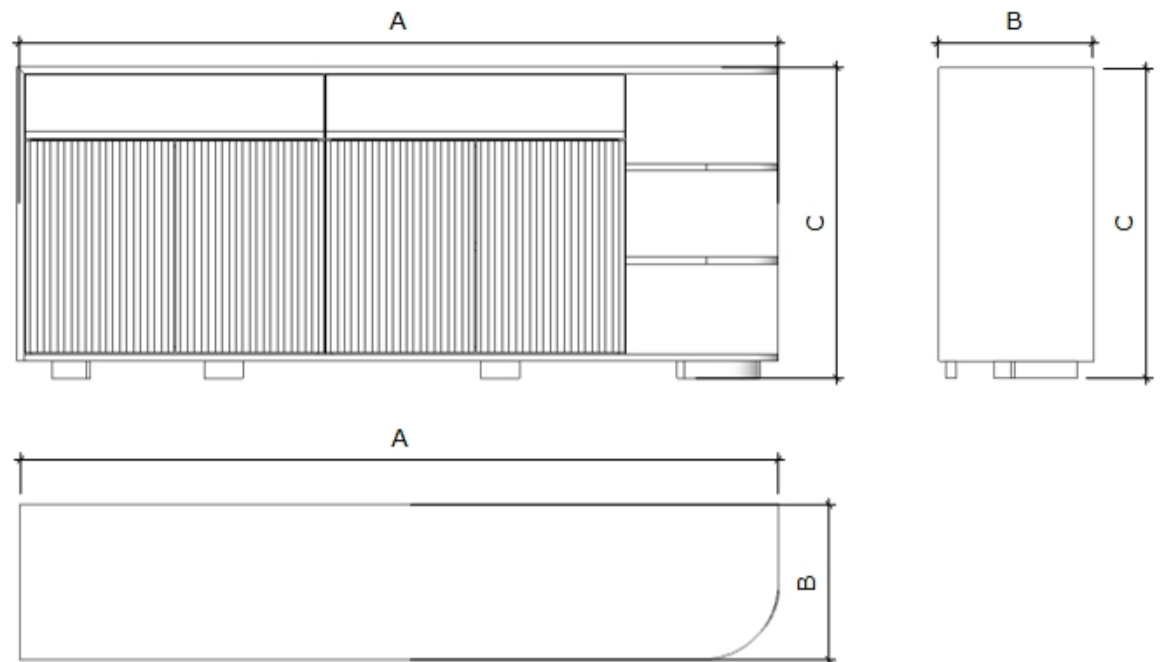

### DIMENSÕES (PT) / DIMENSIONS (FR/EN)

Uni-cm

A	B	C
200	45	90
200	45	90
220	45	90

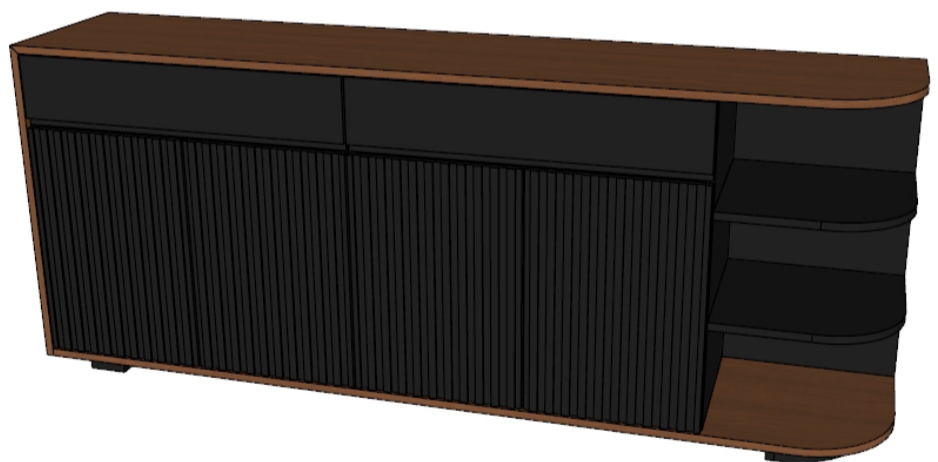

### ESTRUTURA DO MÓVEL (PT) STRUCTURE DU MEUBLES (FR) / FURNITURE STRUCTURE (EN)

#### COMPOSIÇÃO (PT) / COMPOSITION (FR) / COMPOSITION (EN):

2 GAVETAS SOFT-CLOSE + 4 PORTAS + 2 PRATELEIRAS

2 TIROIRS SOFT-CLOSE + 4 PORTES + 2 ÉTAGÈRES

2 DRAWERS SOFT-CLOSE + 4 DOORS + 2 SHELVES

#### DESCRIÇÃO MATERIAL (PT) / DESCRIPTION DU MATÉRIEL (FR) / MATERIAL DESCRIPTION (EN):

OPT. 1 - FOLHEADO + MDF HIDRÓFOGO LACADO / BOIS + MDF HYDROPHOBE LAQUÉ / VENEER + LACQUERED HYDROPHOBIC MDF

OPT. 2 - MDF HIDRÓFOGO LACADO / MDF HYDROPHOBE LAQUÉ / LACQUERED HYDROPHOBIC MDF

PESO (PT) / POIDS (FR) / WEIGHT (EN): 145,8 - 178,2 kg